
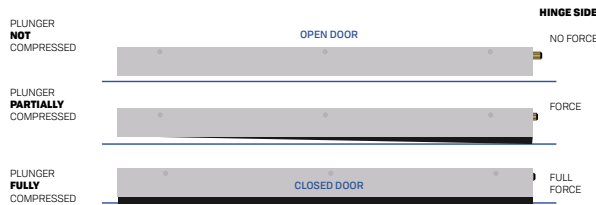


### INSTALLATION INSTRUCTIONS



- 1 - Trim the Legacy automatic door bottom to desired size. When trimming, be sure to only cut from the side with no plunger. Ensure 1/16" clearance on each end for best results.
- 2 - Match up the door bottom on the push side of the door. Ensure the bottom of the aluminum on the unit is flush with the bottom of the opening. You may use a shim to keep the unit off the floor during installation.
- 3 - Fasten unit with provided screws. Ideal clearance between the unit and the finished floor is 3/8".
- 4 - Ultimate adjustment can be accomplished by turning the brass nut in either direction to create the perfect seal.

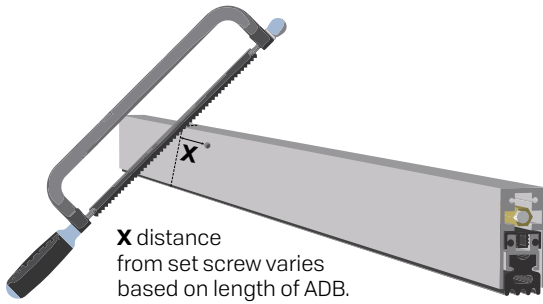


**WARNING** - Do not pull on the insert, rubber, or any components. Overextending the insert to a point lower than designed will result in binding of the unit and the inability of the insert to retract properly back into the housing. Any tampering will damage the mechanism, render the seal ineffective and void the warranty.

### SURFACE (ALSO APPLICABLE TO SEMI-MORTISED)


#7153

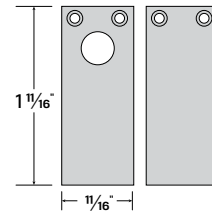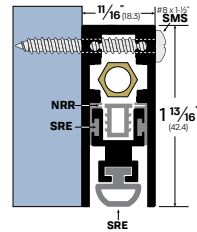


#7153EC

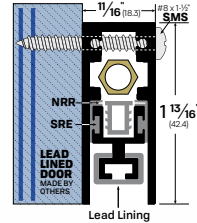



#7163

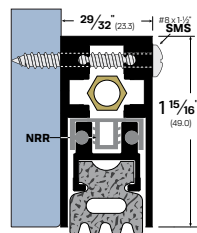

#7563

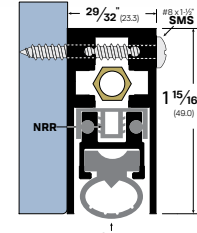


#7763

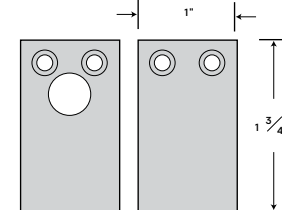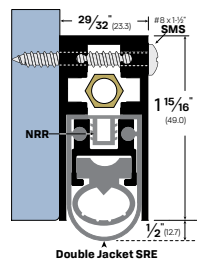


### CONCEALED


#7053

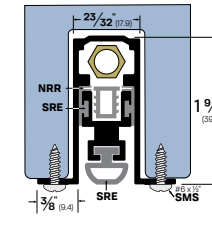


#7063

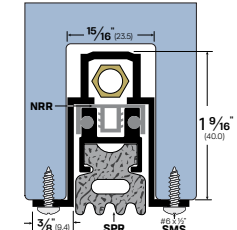


#7463

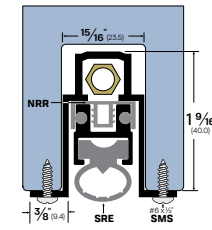

#7963

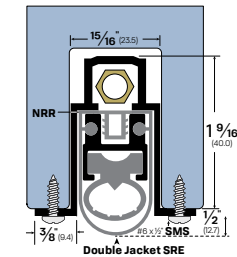

#7053LL

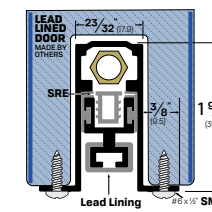

#7023

